

Favorites

The **Favorites** feature allows you to quickly access the channels you have designated as your **Favorites**.

To create a **Favorites** list:

- ω Press the  button.
- ω Then use the   buttons to highlight the  and press the  button.
- ω On the next menu list use the  arrow to highlight the 'Setup' line and press  on remote.
- ω On the next screen highlight the 'Favorites List Setup' line and then press .
- ω Use  to select **NEW** and press .
- ω To add/remove channels to favorites list use the   buttons to select  icon and press .
- ω Use the   to scroll through the channel lineup. When a channel is highlighted press the  to add to your list. (A  will appear next to selected channels).

Note: To swap between listing the channels by alphabetical order to numerical order press the  button on remote.

- ω Once you have selected all of the channels you wish to include in your Favorites List. Use the     buttons to highlight the  and press .

To rename the **Favorites** list you have just created:

- ω Highlight the  icon, and press .
- ω Then using     to highlight the letters shown on the TV screen and press the  button to select the letter.
- ω When finished spelling the name of your new list, highlight the 'SAVE' on screen and press  on remote.

To Exit from the Favorites List Setup screen and return to TV picture press the  button on remote.

**To use the new Favorites channels simply press
the  button on remote.**

Quick Add to Favorites List

To quickly add a channel to your Favorites list, simply go into the Guide function screen by pressing  on the remote. Using the  button highlight the  icon on screen and press . You will then be prompted to select which list you would like to add the channel to. Press the  button on remote to return to regular TV picture.