













Set top box front display

Using the set top box remote

- ω Push the  key.
- ω Then use the   arrows to highlight the  and press the  button.
- ω On the next menu list use the  arrow to highlight the 'Setup' line and press .
- ω On the next screen highlight the 'Cable Box Set Up' line and then press .
- ω On top line 'Front LED Display' will be already highlighted.
- ω Use   arrow key to toggle between current time and current channel to be displayed.
- ω Press the  button to save selection.
- ω Press the  button to exit the screen.